

UNPACKING AND PLACEMENT

- STYLEOUT® 120/240,
- STYLEOUT® STORE,
- STYLEOUT® GARAGE

You need:



Recommended:



1



Check for any visible damage to the packed product and then open it. Dispose of all plastic packaging.

2



First, unscrew all the screws and remove the board at the back of the pallet. We recommend using an electric screwdriver or a simple screwdriver.


CAUTION: Do not remove the tightening straps yet.



3



Unscrew and remove all three screws in each of the three load-bearing wooden blocks below the pallet that secure the blocks under the board.

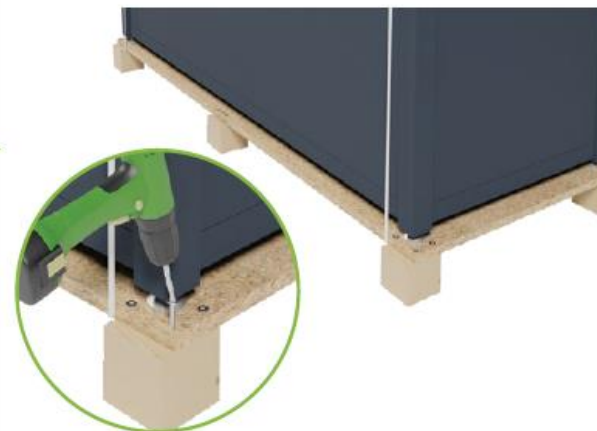

4



Carefully tilt the entire product with the pallet forward to remove the carrying blocks with your foot. When all the blocks are removed, carefully lean the product back so that the panel sits firmly on the ground.



5



Remove the tightening straps and the wooden reinforcements underneath.



6



To move the product, you need two persons on each side to hold it under the side frame. Carefully lift the product and move it to the desired position.

CAUTION: You can only lift the product by the side frame.



7



The product has four (or 6) height adjustable feet. Adjust the height of all feet with an open-end wrench so that the product is fixed and leveled.



8



The lower door guide (A) and profile for blocking wheels (B) must be adjusted to the terrain.

4.1


Loosen the allen screws on both sides.



9



Push toward the ground and adjust to the terrain.

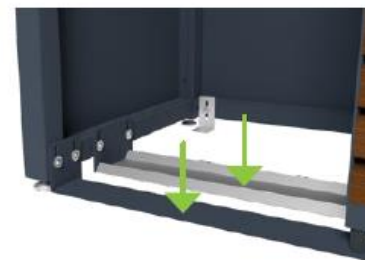


ATTENTION! Profile for blocking wheels is not included when ordering StyleOUT® 120/240 with lifting roof and StyleOUT® STORE.

10



Tighten again the allen screws.

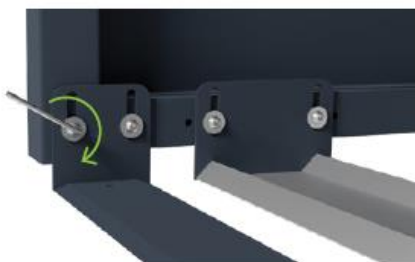

11



Profile for blocking wheels is set to the middle position (position 2) by default. If necessary, you can move it and attach it forwards or backwards (position 1 and 3).


POSITIONS:



12



When adjusting the height, pay attention to POM guides. If the first seal (O-ring) of POM guide is visible, you have reached the maximum possible height.

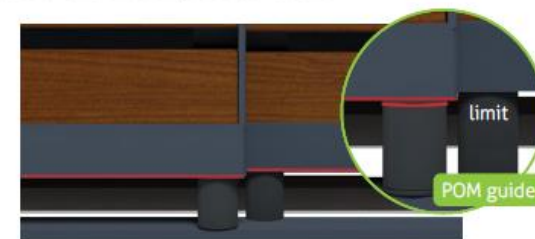

IN ADDITION: If the slope size is between 2,5 and 7 cm, use of extended lower door guides (not included) is necessary.



13



Attach the product to the ground using the holes on the left/right side of the front door guide (A) and mounting brackets located at the back of the waste enclosure (B).

