



Mounting instructions - TuliP Traverse

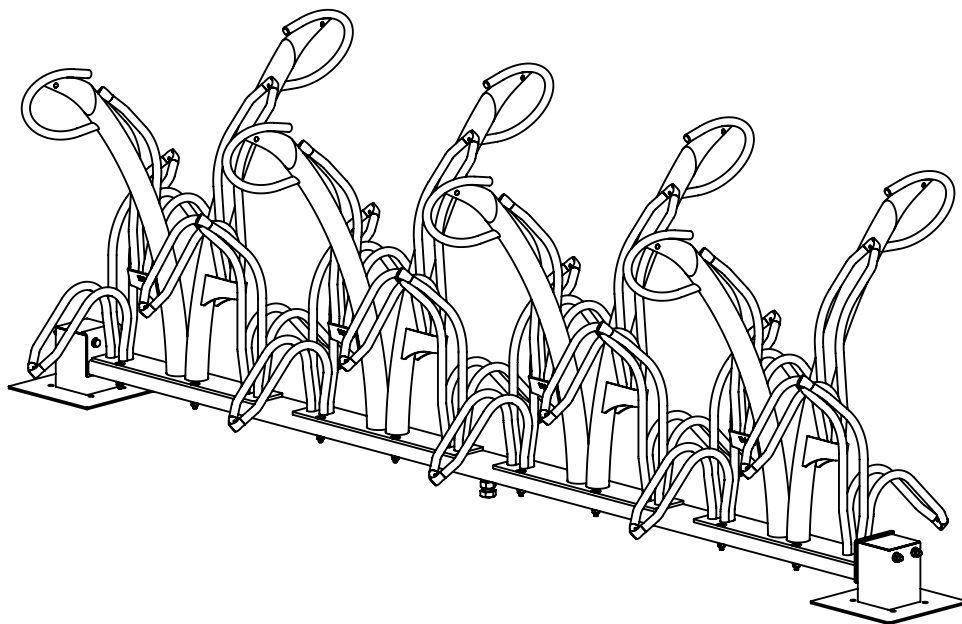

© Copyright VelopA B.V.
www.velopa.com

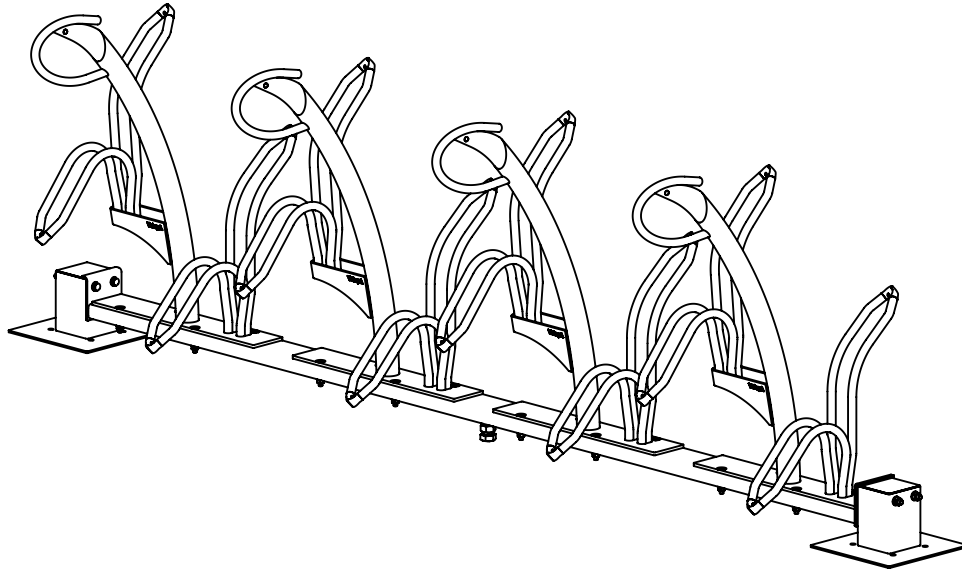


Mounting instructions - Tulip Traverse




© Copyright VelopA B.V.
www.velopa.com

1a optioneel

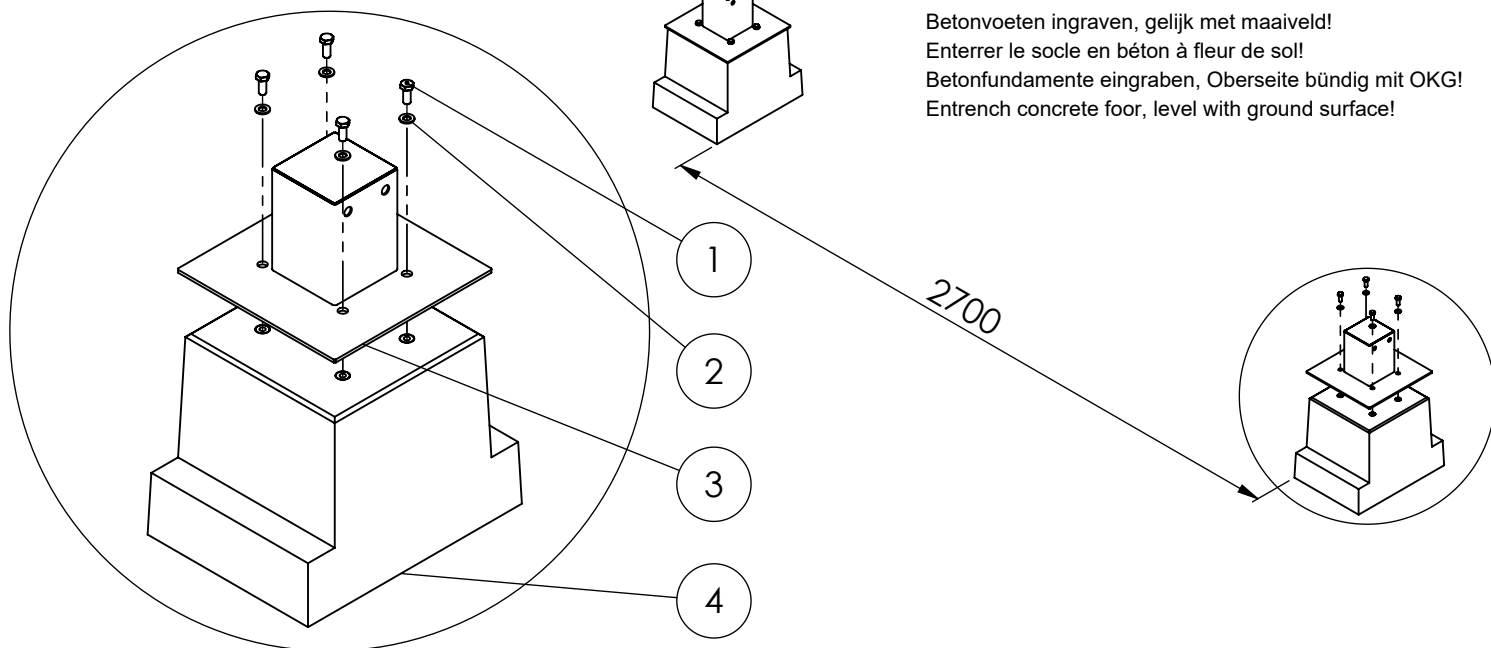

1b

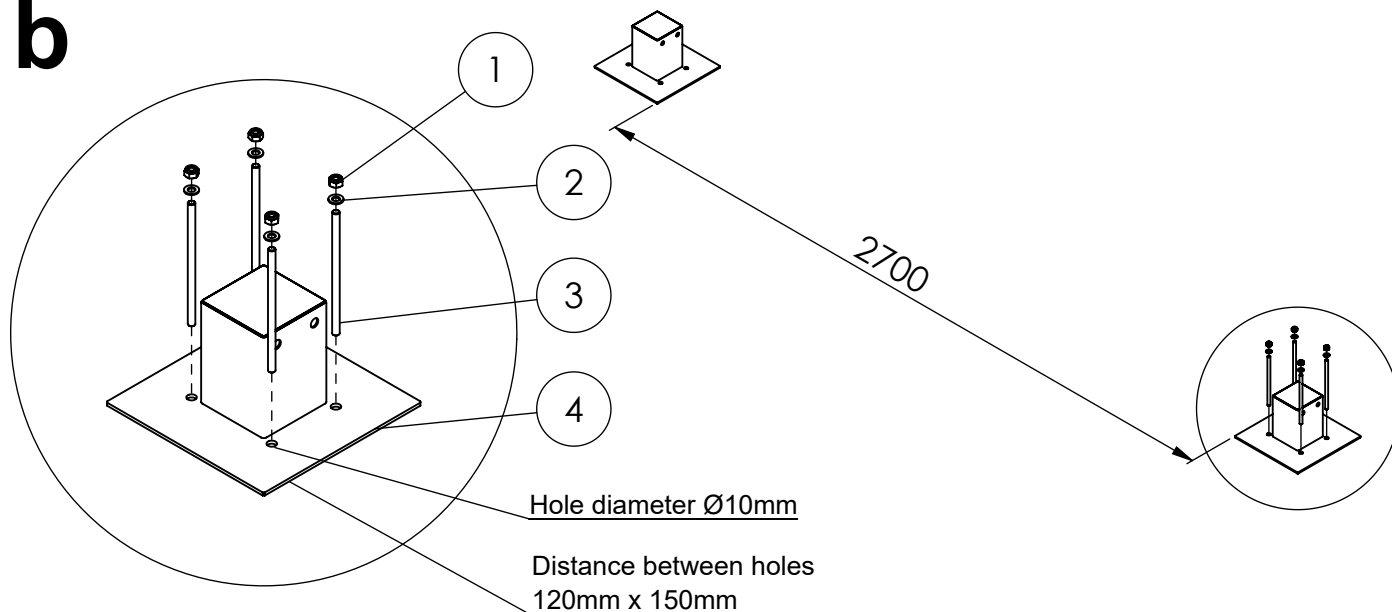

Item	Name	Qty.	Remark
1	Hex bolt M10x25	8	DIN 933 - M10x25
2	Washer M10	8	DIN 125 - M10
3	TulIP Traverse - Support Weldment	2	
4	Concrete foot with 4 M10-tube inserts	2	4 thread bushes M10x60


Item	Name	Qty.	Remark
1	Torque nut (SS) M10	4	DIN 985 - M10 - A2
2	Washer (SS) M10	4	DIN 125 - M10
3	Stud M10x198	4	DIN976 - M10x198
4	TulIP Traverse - Support Weldment	2	

Mounting instructions - Tulip Traverse




© Copyright VelopA B.V.
www.velopa.com


2

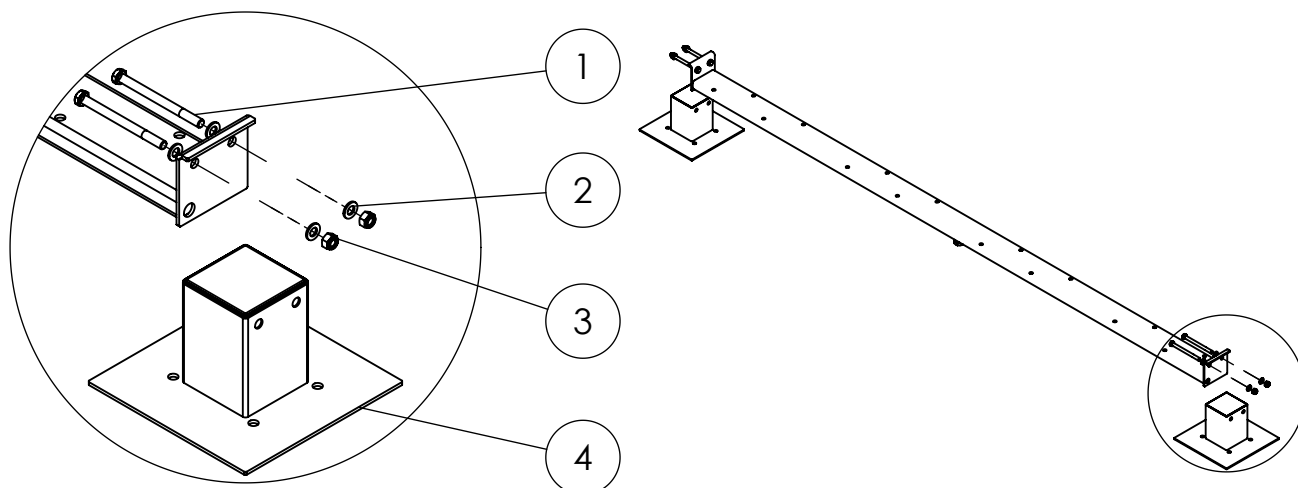

2b optioneel

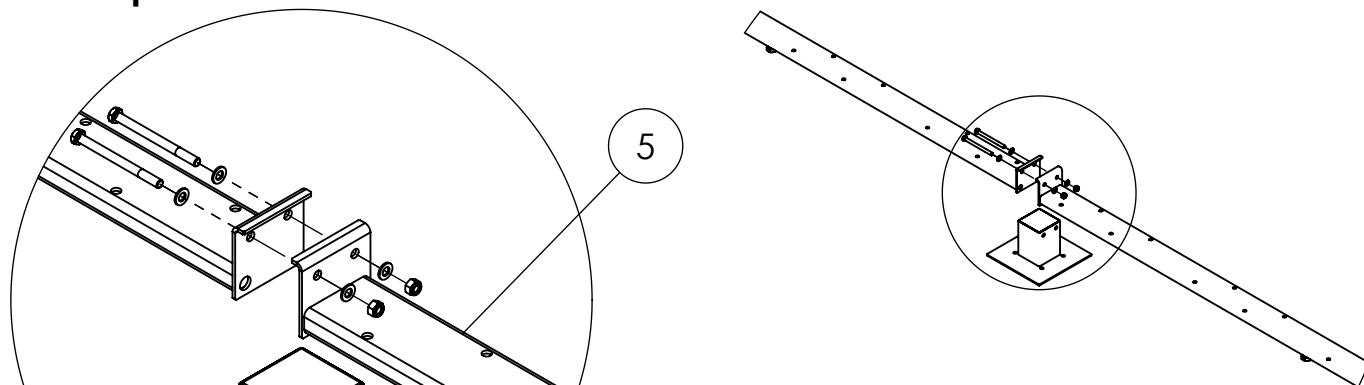

3

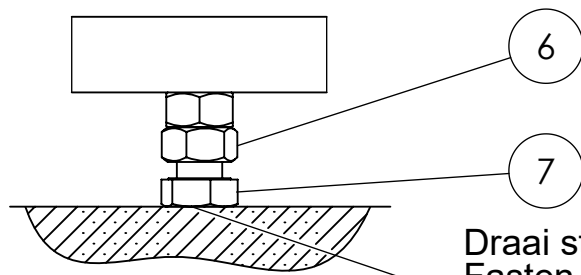

Draai strak tegen de grond
Fasten tightly against the ground surface



Item	Name	Qty.	Remark
1	hex bolt M12x150	4	DIN931 - M12x150
2	Washer M12	8	ISO 7089 - M12
3	torque nut M12	4	DIN 985 - M12
4	TulIP Traverse - Support Weldment	2	
5	TulIP Traverse - Beam	1	
6	nut M24	1	DIN 985 - M24
7	hex bolt M24x70	1	DIN933 - M24x70

Mounting instructions - Tulip Traverse





© Copyright VelopA B.V.
www.velopa.com

4a Tulip - double sided

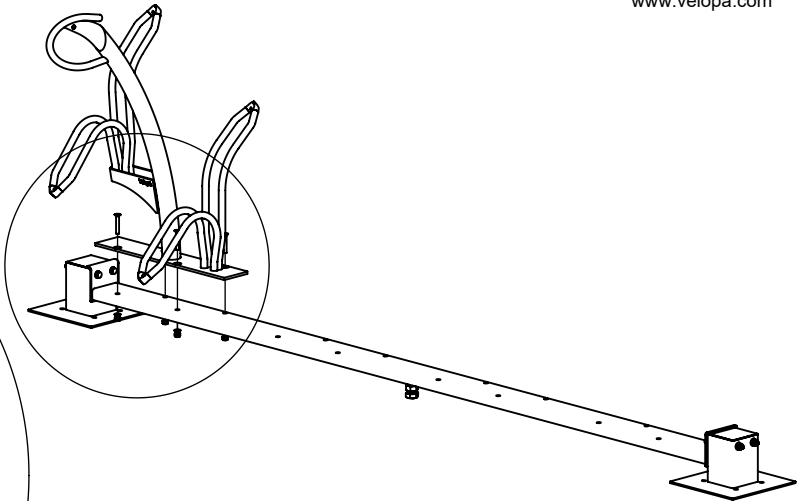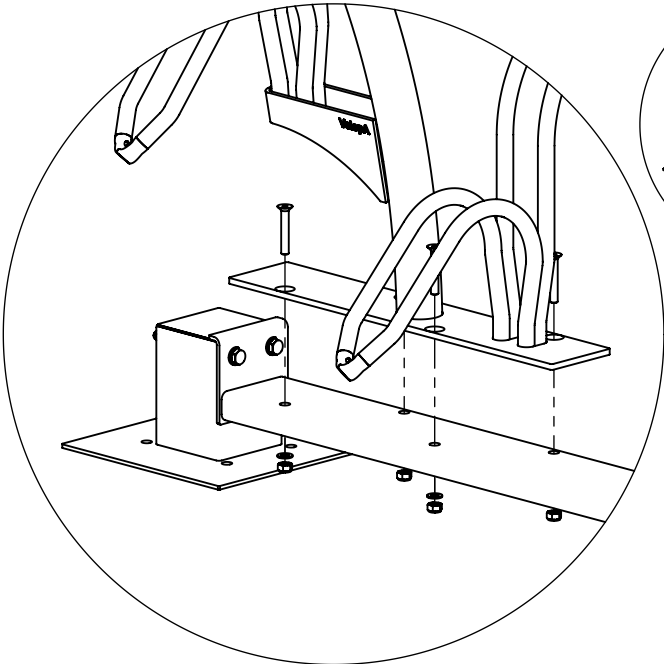

4b Twin Tulip

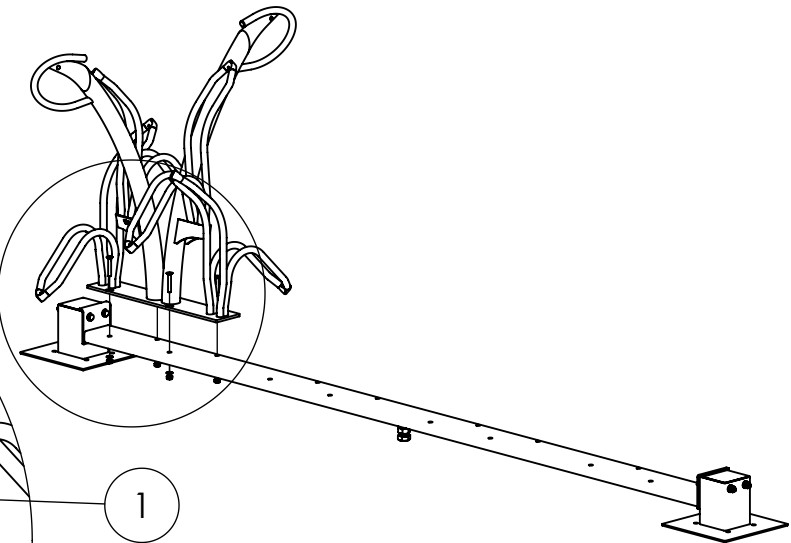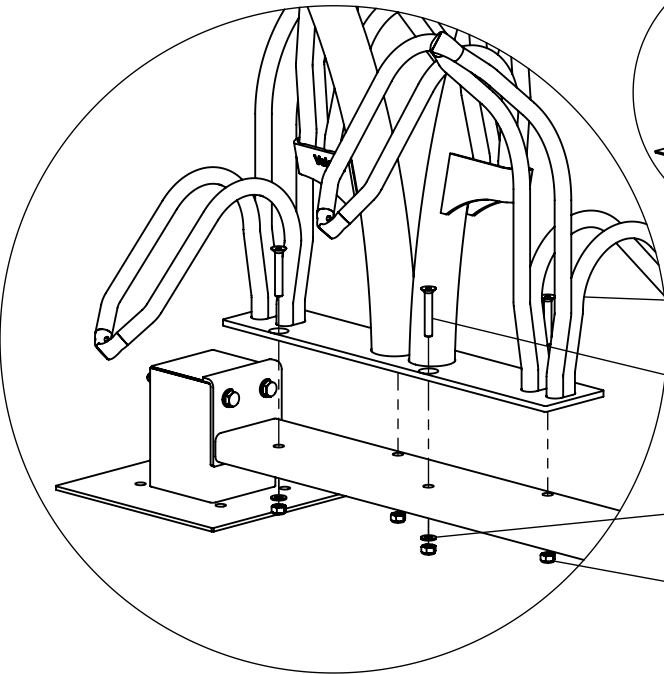

Item	Name	Qty.	Remark
1	Tulip on Traverse - Weldment	1	FPK2021
2	M10x60 countersunk socket head screw	4	DIN7991 - M10x60
3	Washer M10	4	DIN 125 - M10
4	Torque nut M10	4	DIN 985 - M10